



HEAD OFFICE:  
37 Paramount Blvd.  
Derrimut Vic 3030  
Tel: 03 8390 6300 Fax: 03 8390 6366  
EMAIL: [ectglo@bigpond.net.au](mailto:ectglo@bigpond.net.au)  
WEBSITE: [www.ectglobal.com.au](http://www.ectglobal.com.au)

## Instruction – How to change a cartridge

1. Please take out a little cap at the back (sometimes at the front) of the handle. See attached photo.




2. Push the handle to one side (either left or right, but do not turn on water) which give you more space at the back. Then use an Allen key to push into the hole and unscrew the grab screw inside of the hole. Once the screw loose, you can take the handle off the mixer.



3. Then you will see a chrome cover on the top of the cartridge. Please use a pair of point Pliers to unscrew the fitting (anti-clockwise).



4. Then take out the cover and the old cartridge, replace it with the new one. Please make sure the 2 little buttons (at the bottom of the cartridge) are inserted into the holes. After that, you can screw the chrome cover back on.

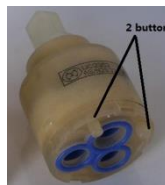

5. Test the mixer to see if the leak stopped. If yes, then put back the handle with grab screw and the cap to cover the hole.